


## Solder Instruction

- 1. Cable should be prepared for soldering. The cable/wires must be pretinned.
- 2. Insert cable/wire into solder cup.
- 3. Operate the soldering iron at 350°C, 50 Watt max. and use a pencil tip.
- 4. Apply some solder to the solder tip of the soldering iron.
- 5. Put tip to wire in solder cup.
- 6. After 1 second bring in solder.
- 7. Heat for 3 seconds longer. Do not heat contact more than 4 seconds in total.
- 8. Remove soldering iron.
- 9. Wait until solder gets rigid again.
- 10. Do not solder adjacent contacts consecutively, alternate position within the connector to minimize heat build up.

## RECOMMENDED PANEL CUT-OUT

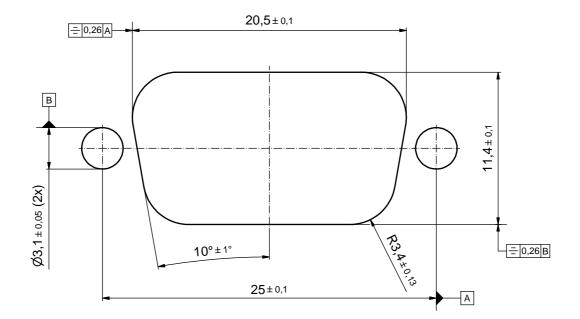

	T DUT GmbH	HAND					tol	erance	Tod		scale: 5:1	
									74		material: SEE SHEET 1	-
	TAY NO	B				_			dim. in m	_		4
	COPIED IND MAY ARTY WI	18						date	name		title:	-
1	BE COPIED ', AND MAY D PARTY WI SHT OF CON	DRAWING					drawn	30.09.14	Lehmenküh	ler	RECOMMENDED PANEL CUT-OUT	П
	AY NOT BE ( INY WAY, AN A THIRD PA ION. COPYRIGHT						appd.	26.01.15	Fischer		D-SUB FEMALE 9pos. SOLDER CUP	-
	AY NA IN A I	GP					norm				with open 4-40 UNC thread	
	NG MA N TO NN TO SMISS	臣					d-old				dwg no: DIN-	
	資品の混画	₹	1 x c	Ä8527	25.09.15	Unkrüer	4	45 5.			15K1A1542	╛
	DRA ODU VSSE TEN ERSF	NOT	а	Original					Y 5=4	<b>II</b> C®	sh:	
	THIS DRA REPRODU BE PASSE WRITTEN OWNERSH	00	rev.	description	date	name	•		11-6	1	part no: SEE SHEET 1	7
			6		-		_				D .	_